

ASSEMBLY DIAGRAM
FLAT ROOF CABIN
***TOILET MODEL ***



lavorazione materie plastiche


sede legale ed operativa

12079 Saliceto (CN) Loc Sattamini Zona Industriale


Tel 0174 906502 Fax 0174 96270

[http //www recar.it](http://www.recar.it) - e-mail: info@recar.it


Before starting the assembly, prepare a rigid horizontal plane (wooden or concrete plank) on which the cabin will be placed and determine the exact position of the same, more precisely where will be placed the door that normally opens outside, unless otherwise required by customer. Proceed with the placement of the wall with the door (wall A)

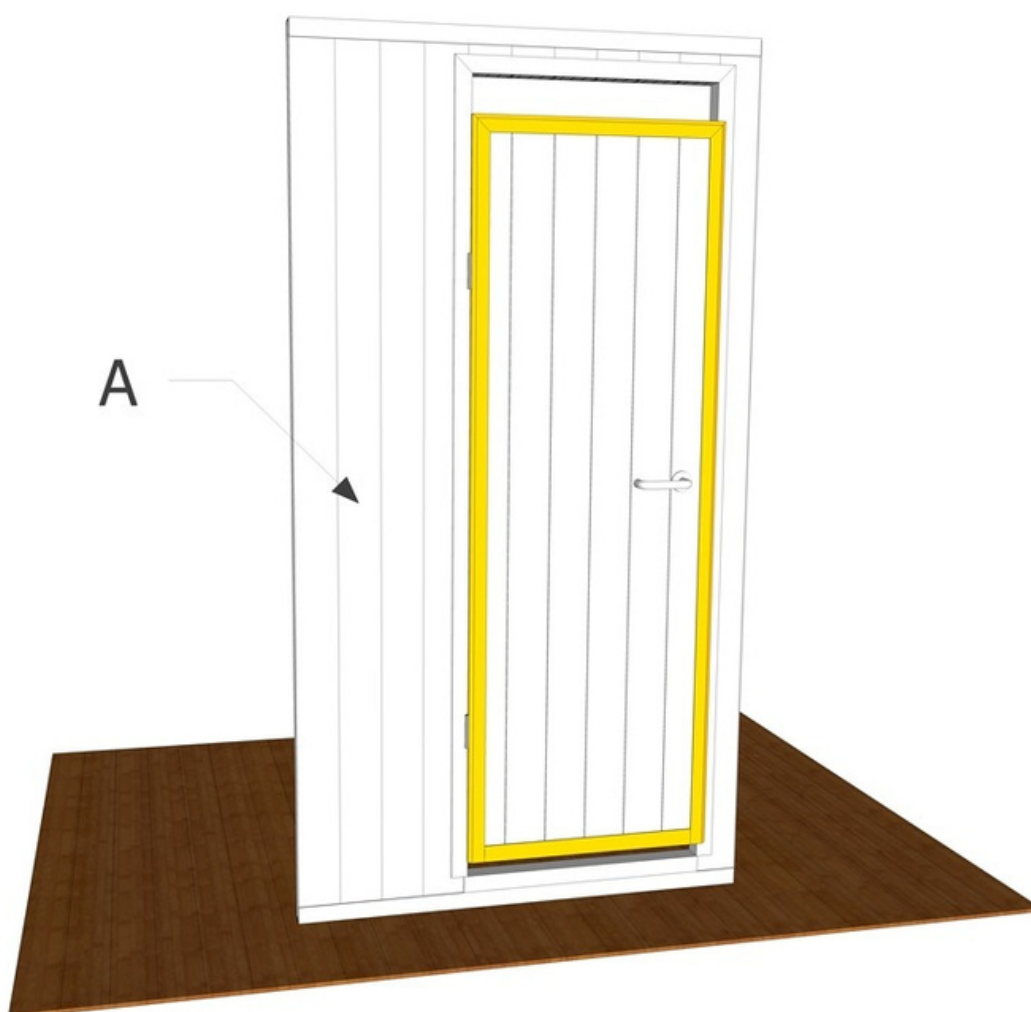

Take the crosses, taking care to place the longer ones on the front and the shorter ones on the back. Approach the left wall (wall B) to wall A and insert the joint from top to bottom

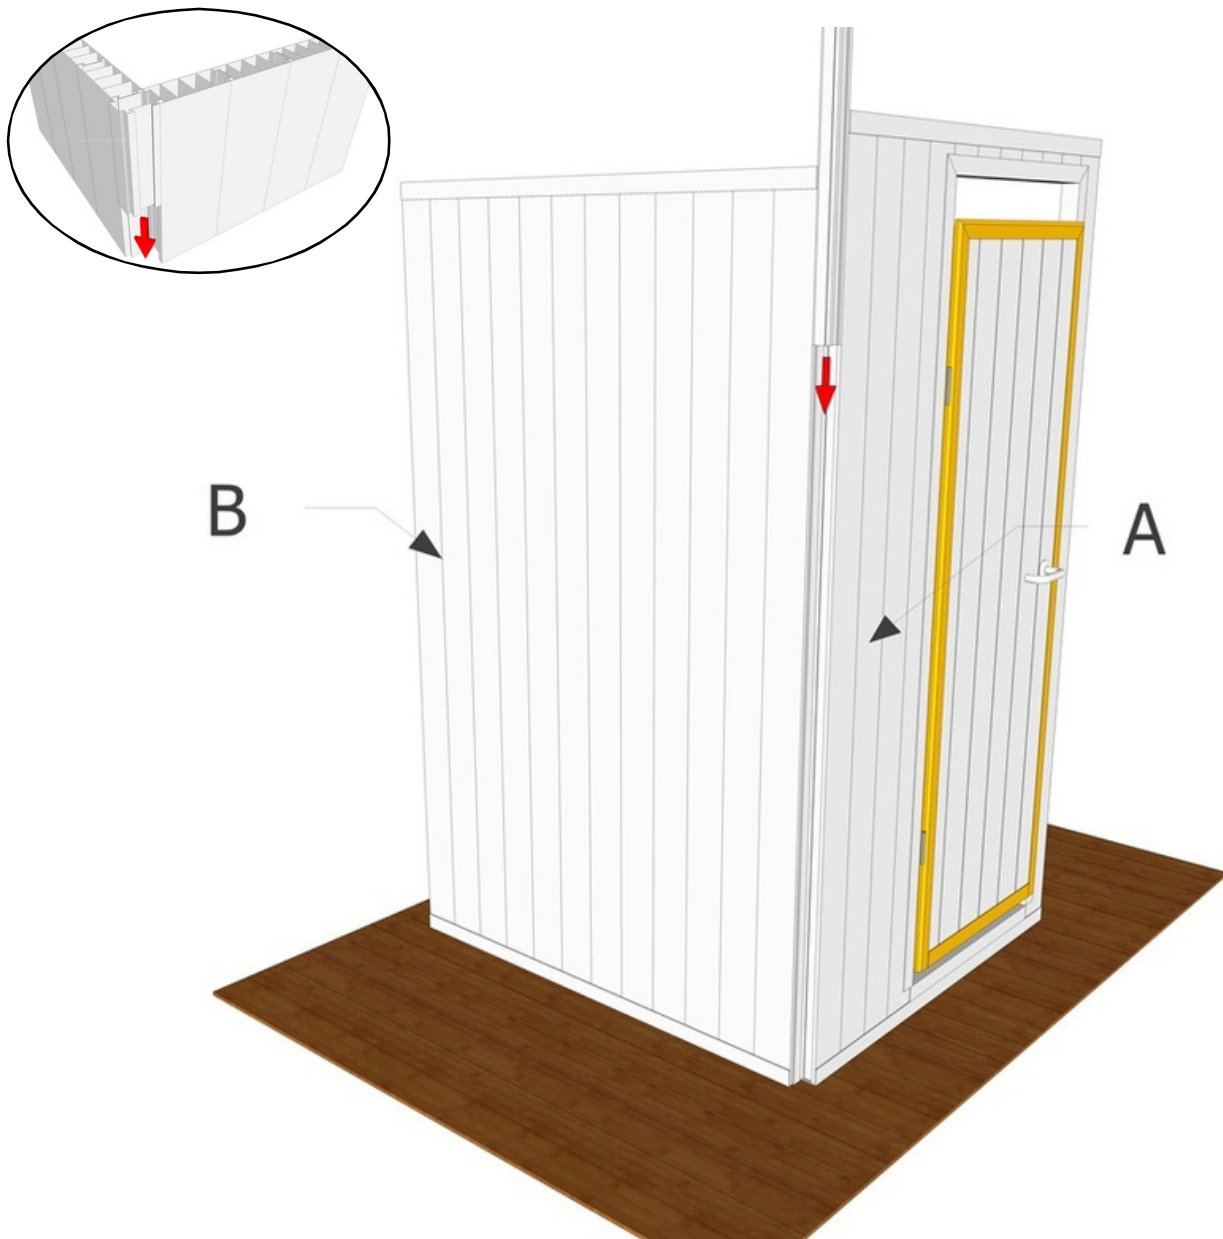

Do the same for the right wall (wall C) and the back wall (wall D)

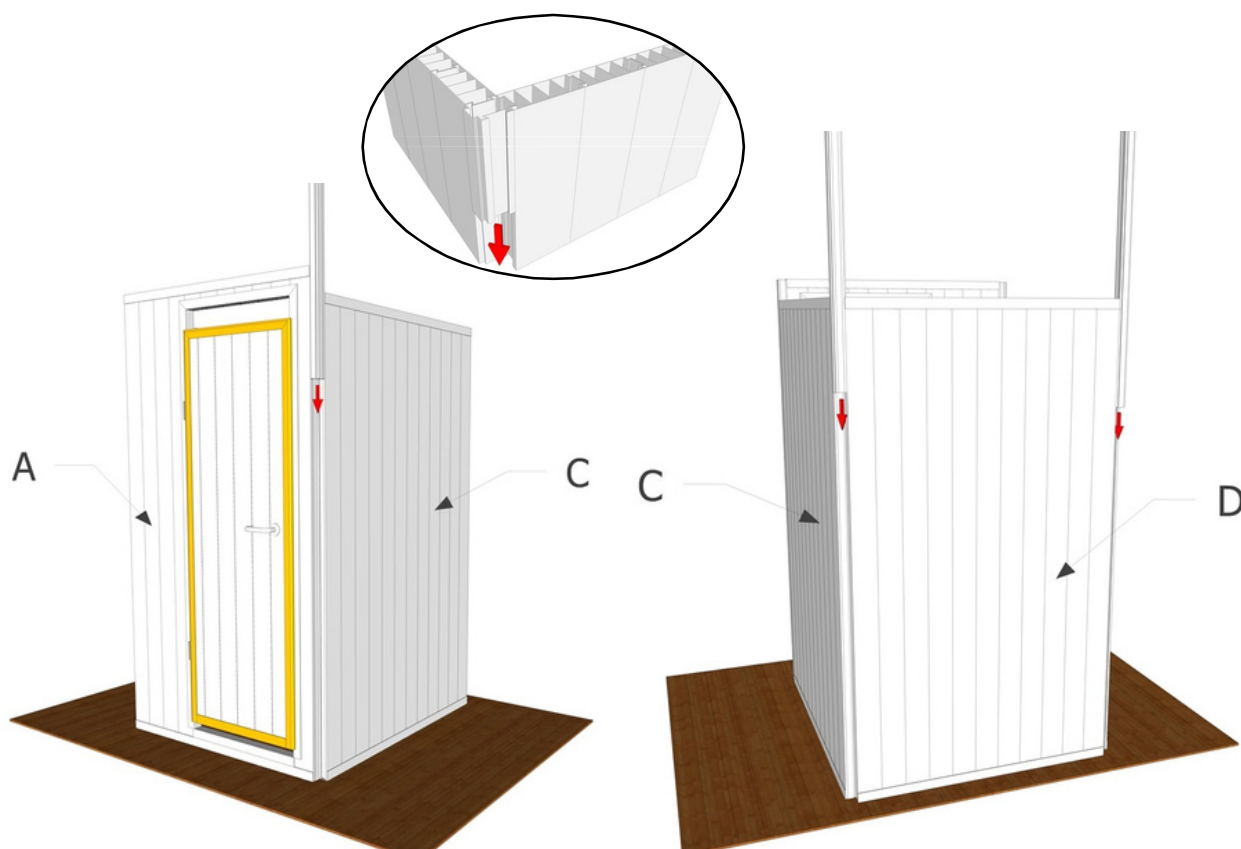

P.N.: the walls of right and left are equal therefore interchangeable.


Once the walls have been assembled, proceed with the insertion of the handle in the door.

Proceed to the positioning of the PLATFORM, which will help to keep in square the walls of the cabin.




Before proceeding with the installation of the cup and the Sink, it's needed to fix the roof. This step will give greater stability to the structure.

The Roof is formed by a single panel with 2 fixing angles

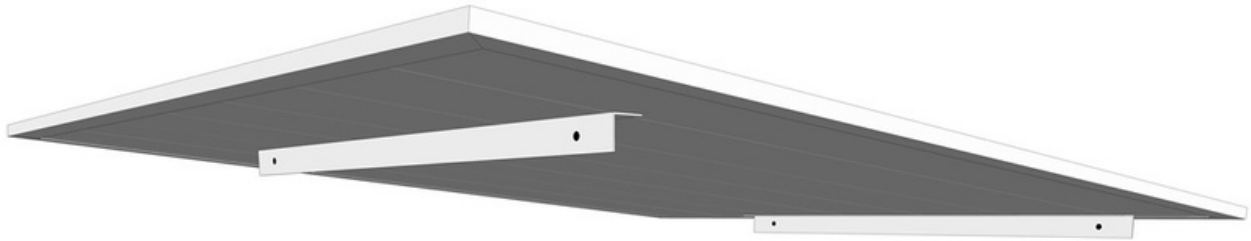

Place the roof on the cabin, making sure that the L-shaped profiles remain inside the 4 walls.

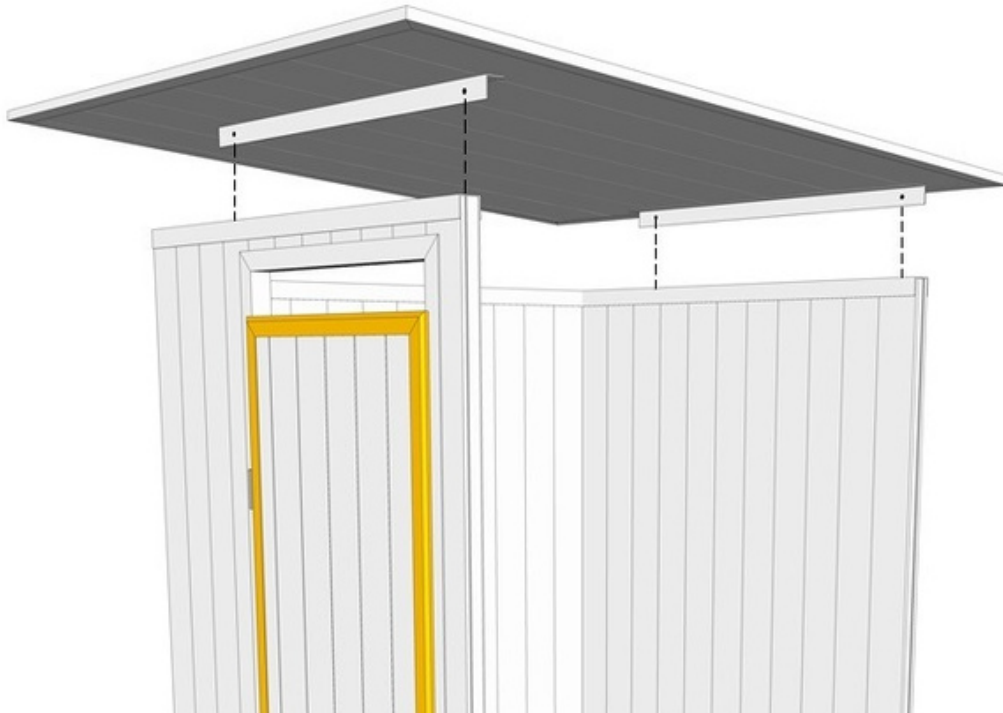


Drill through holes on the L-shaped profiles and on the wall for anchor the roof to the structure by means of steel bolts inox N.B.: the most protruding part of the roof with respect to the L profile, It must face the front.

Place the CUP with drain on the ground, then fix the tray to the back at the indicated points




Like the tray also the SINK must be anchored in the points indicated on the wall of the structure, by means of stainless steel through bolts.

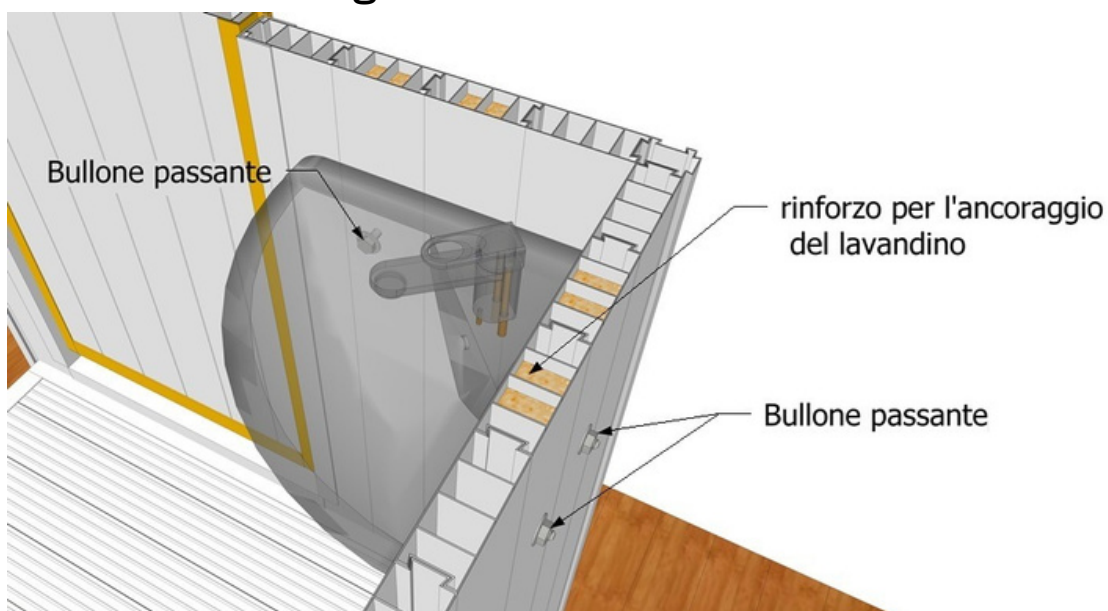



The cabin can be anchored to the ground by the helpers at the base of the wall.

Interno parete

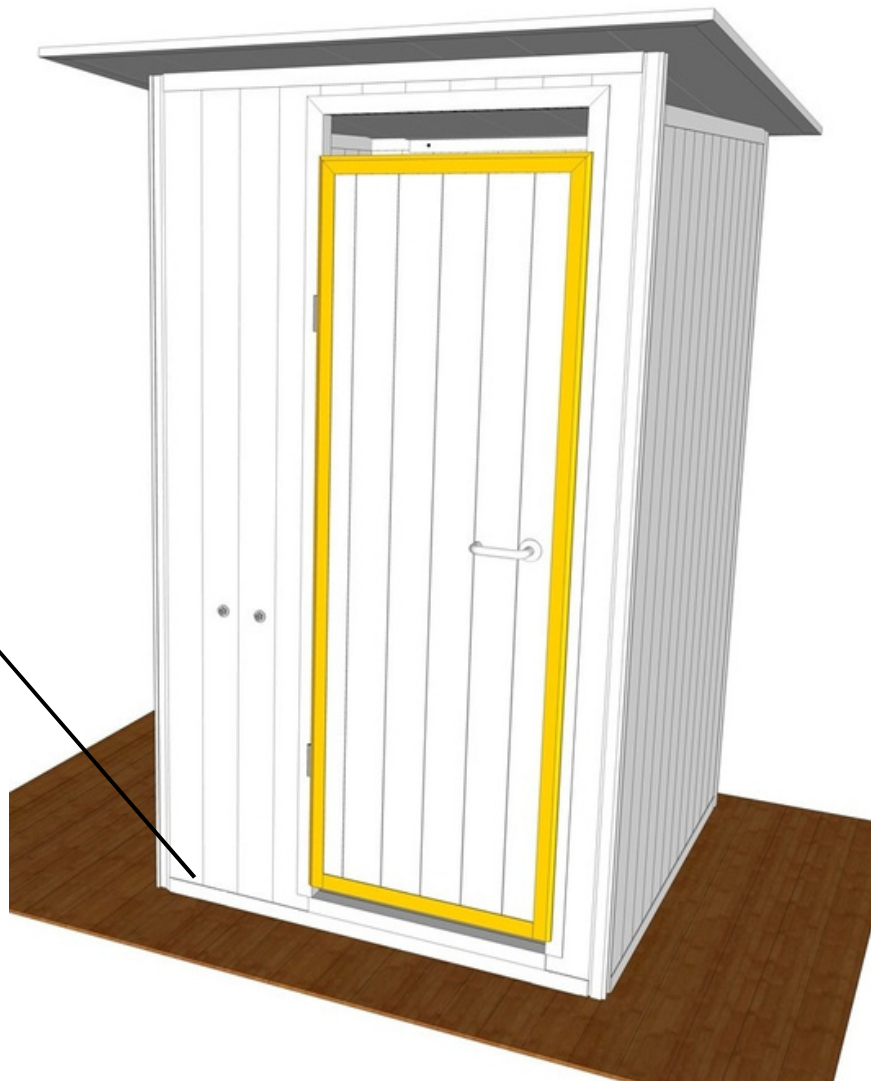

List of accessories provided for mounting:

N appears. 1 Sink complete with hardware for fixing

N appears. 1 Cup with tray complete with hardware for the fixation

N caution. 1 Cabin handle

N quell. 1 Pawl

N appears. 4 Ground fixing brackets for cabin

N. 4 Fischer 8

N I. 16 Bolts 6 x 16 for roof fixing complete with washers

N replace. 4 screws 4,8 x 45 for cabin for fixing the squads on the ground

N replace. 4 screws 5,5 x 25 for cabin for fixing the squads at the cabin