

**ASSEMBLY DIAGRAM**  
**FLAT ROOF CABIN**  
**\*IRIS AND SOUBRETTE MODEL\***



**lavorazione materie plastiche**

*sede legale ed operativa*

12079 Saliceto (CN) Loc Sattamini Zona Industriale

Tel 0174 906502 Fax 0174 96270

[http //www recar.it](http://www.recar.it) - e-mail: [info@recar.it](mailto:info@recar.it)

Before starting the assembly, prepare a rigid horizontal plane (wooden or concrete plank) on which the cabin will be placed and determine the exact position of the same, more precisely where will be placed the door that normally opens outside, unless otherwise required by customer. Proceed with the placement of the wall with the door (wall A) Fig.1

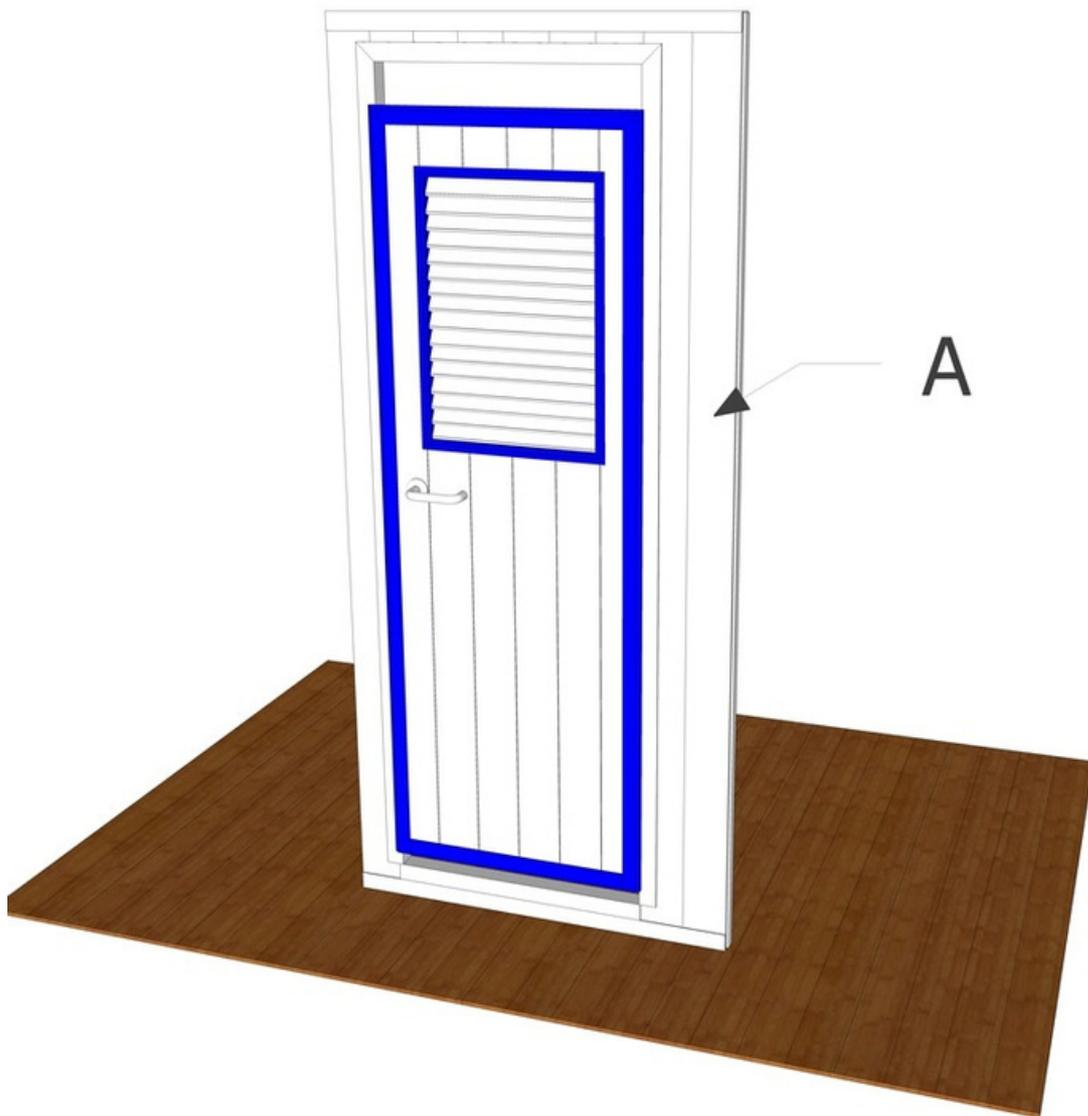


Fig. 1

Pull the right and left joints, being careful not to swap them. Place the left wall (wall B) next to wall A and insert the joint from top to bottom Fig.2

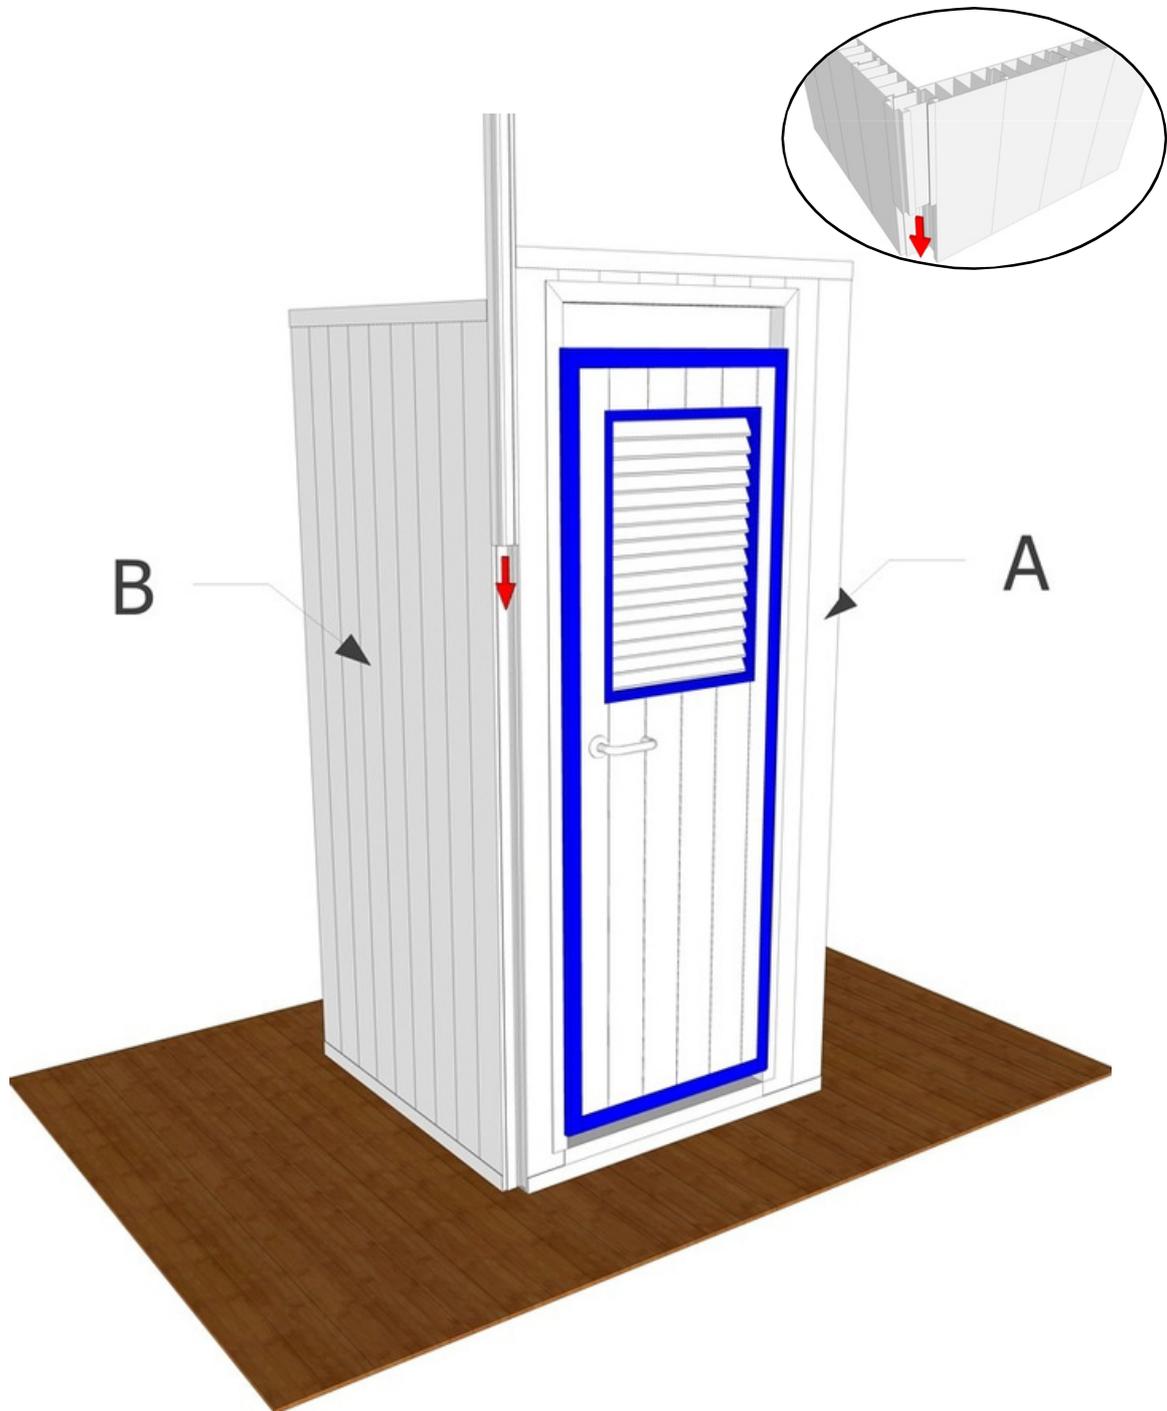


Fig. 2

Do the same for the right wall (wall C) and the back wall (wall D) Fig. 3 - 4

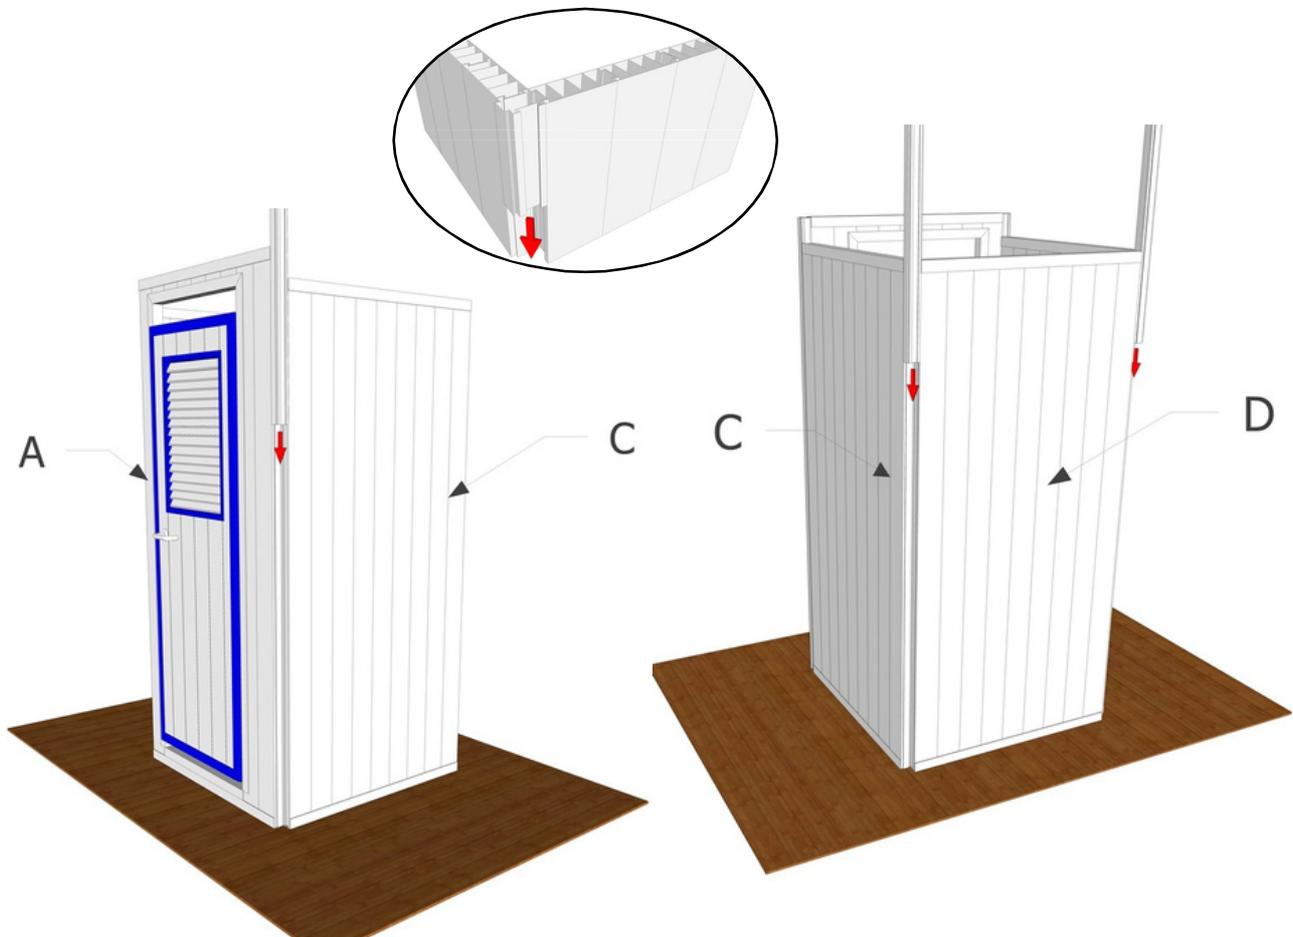


Fig. 3 Fig.4

P.N: right and left walls are equal therefore interchangeable.

Once the walls have been assembled, proceed with the insertion of the handle in the door.

Proceed to the positioning of the supports for the internal BENCH which must be placed on the wall D. Fig. 5

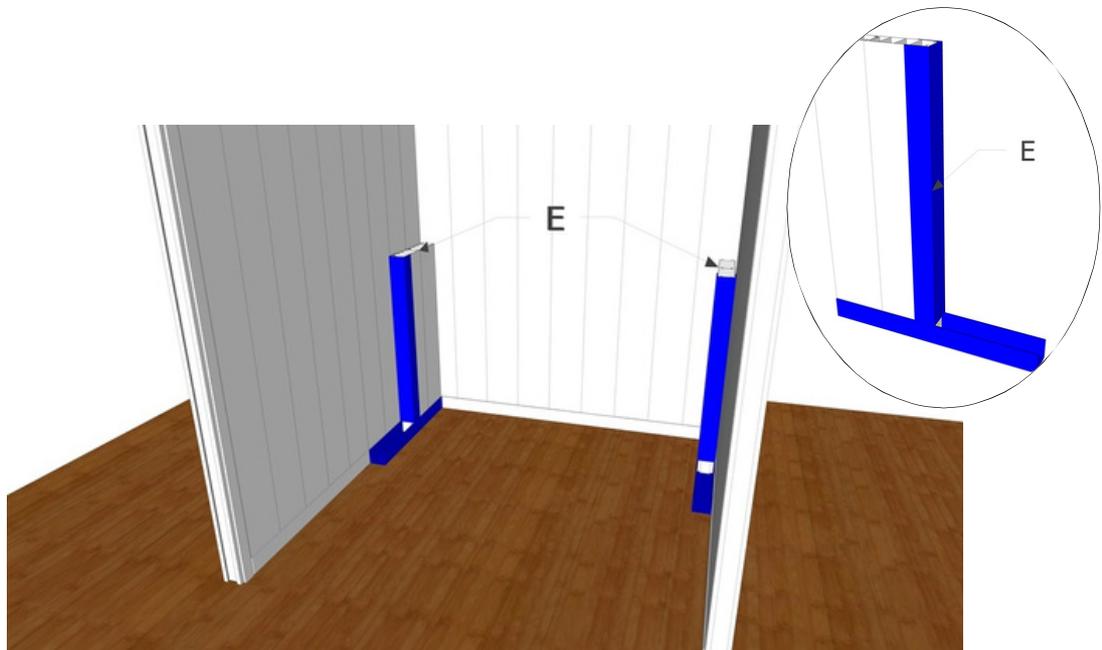


Fig. 5

Place the internal FOOTREST, which will help keep in square the walls of the cabin and hold the supports of the BENCH. Then lay the bench top of the supports.

Fig.6 - 7

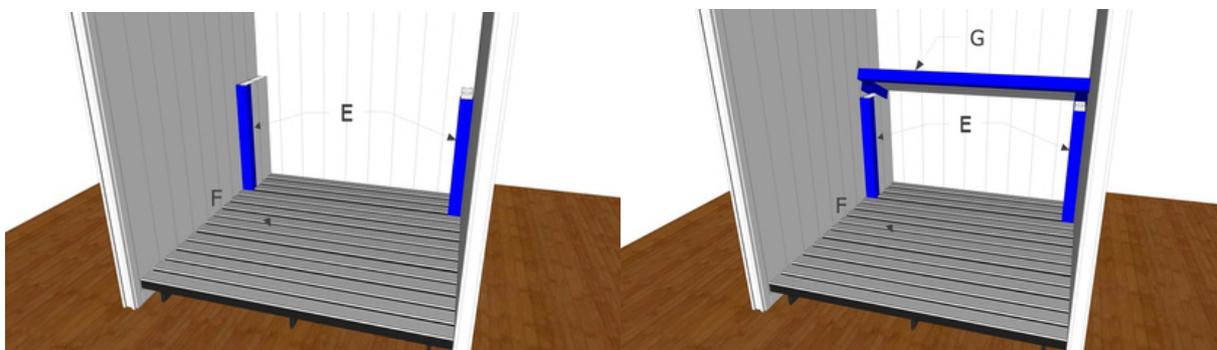


Fig. 6 Fig.7

The COAT HANGER can be fixed indifferently on the right or left wall. Make two holes on the chosen wall in correspondence to those already existing on the hanger and fix using two bolts (# 6x70 stainless steel) through hanger and wall. Fig.8

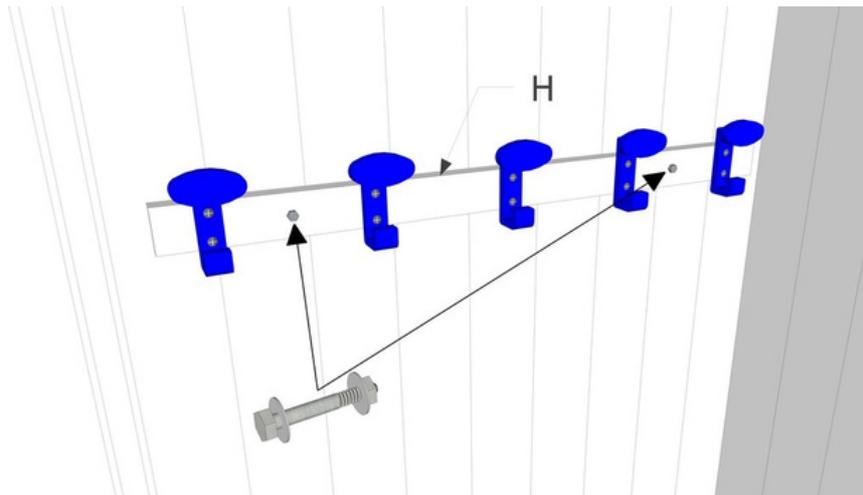


Fig. 8

The MIRROR comes with a hook; just a small hole in the back wall, or where you prefer, at a height at will. Fig.9

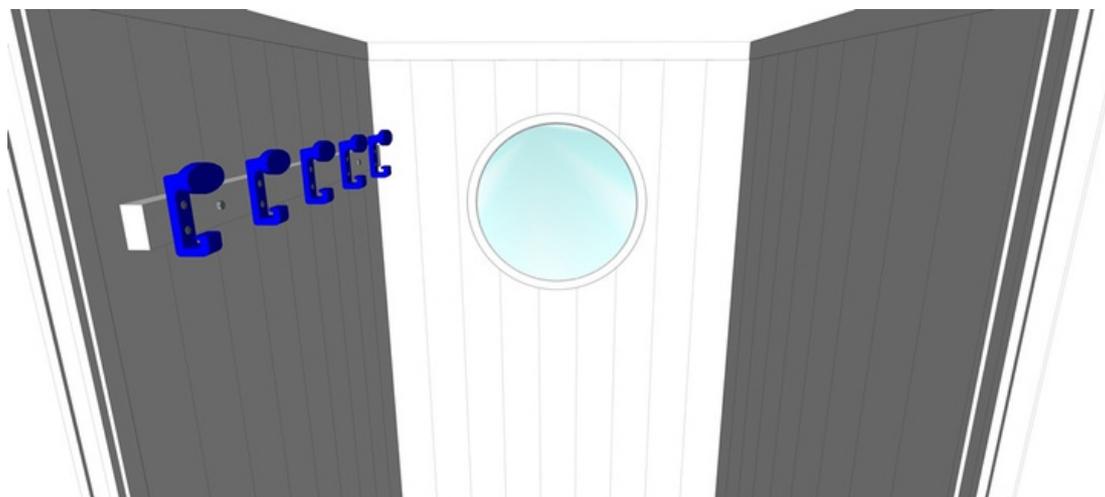


Fig. 9

The roof consists of a single panel with 2 fixing angles  
Fig.10


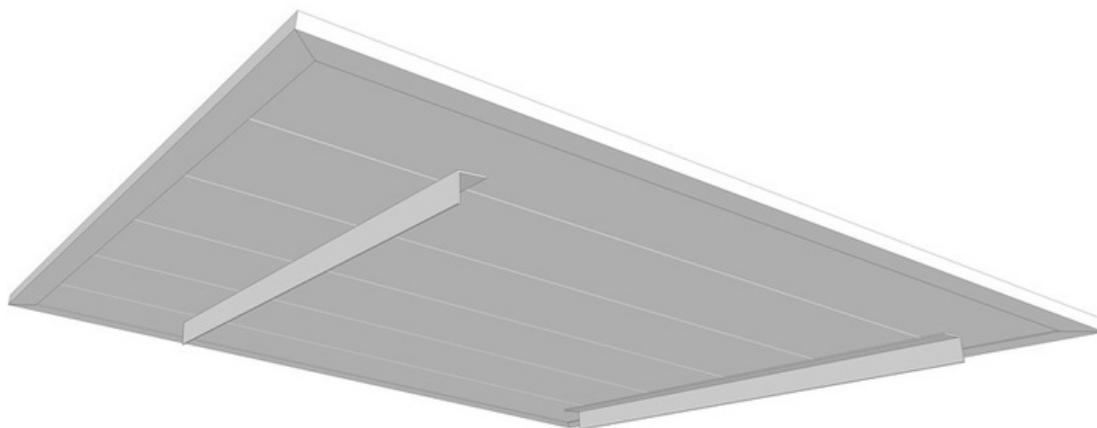


Fig. 10

Place the roof on the cabin, making sure that the L-shaped profiles remain inside the 4 walls.

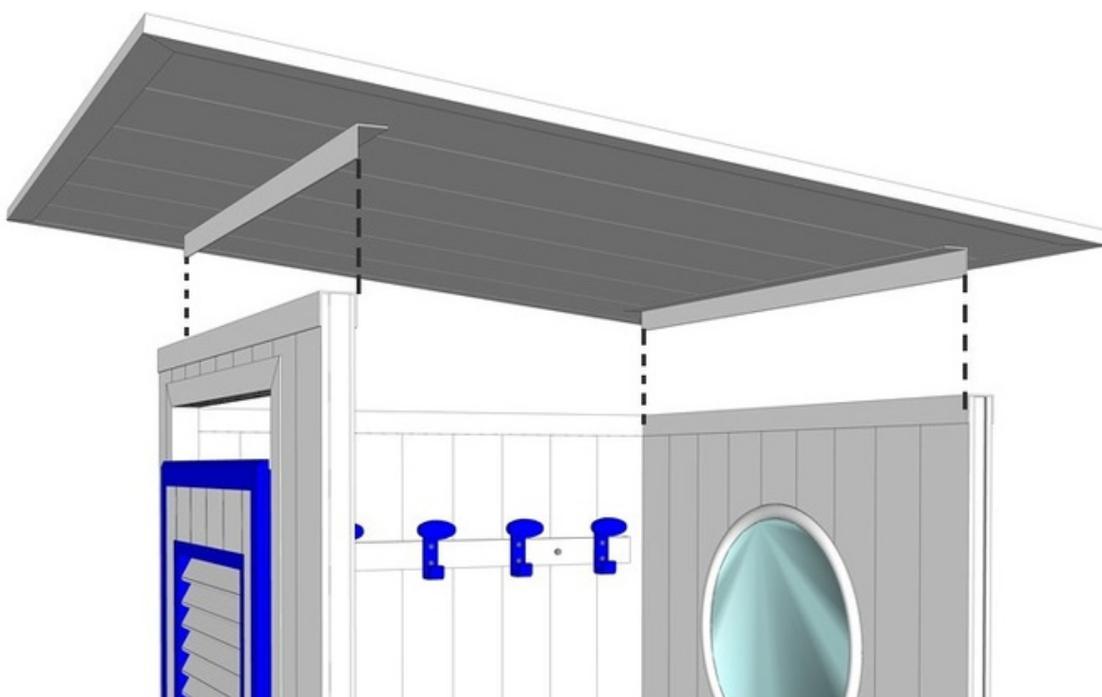


P.N.: the most protruding part of the roof with respect to the L profile,  
It must face the front.

## IRIS E SOUBRETTE

Once the roof is placed, it is necessary to check the correct opening of the door, in case there is some imperfection, retouch with small thickeners on the sides of the door. At this point it is possible to fix the roof to the structure by means of bolts.

The cabin can be anchored to the ground by the helpers at the base of the wall.

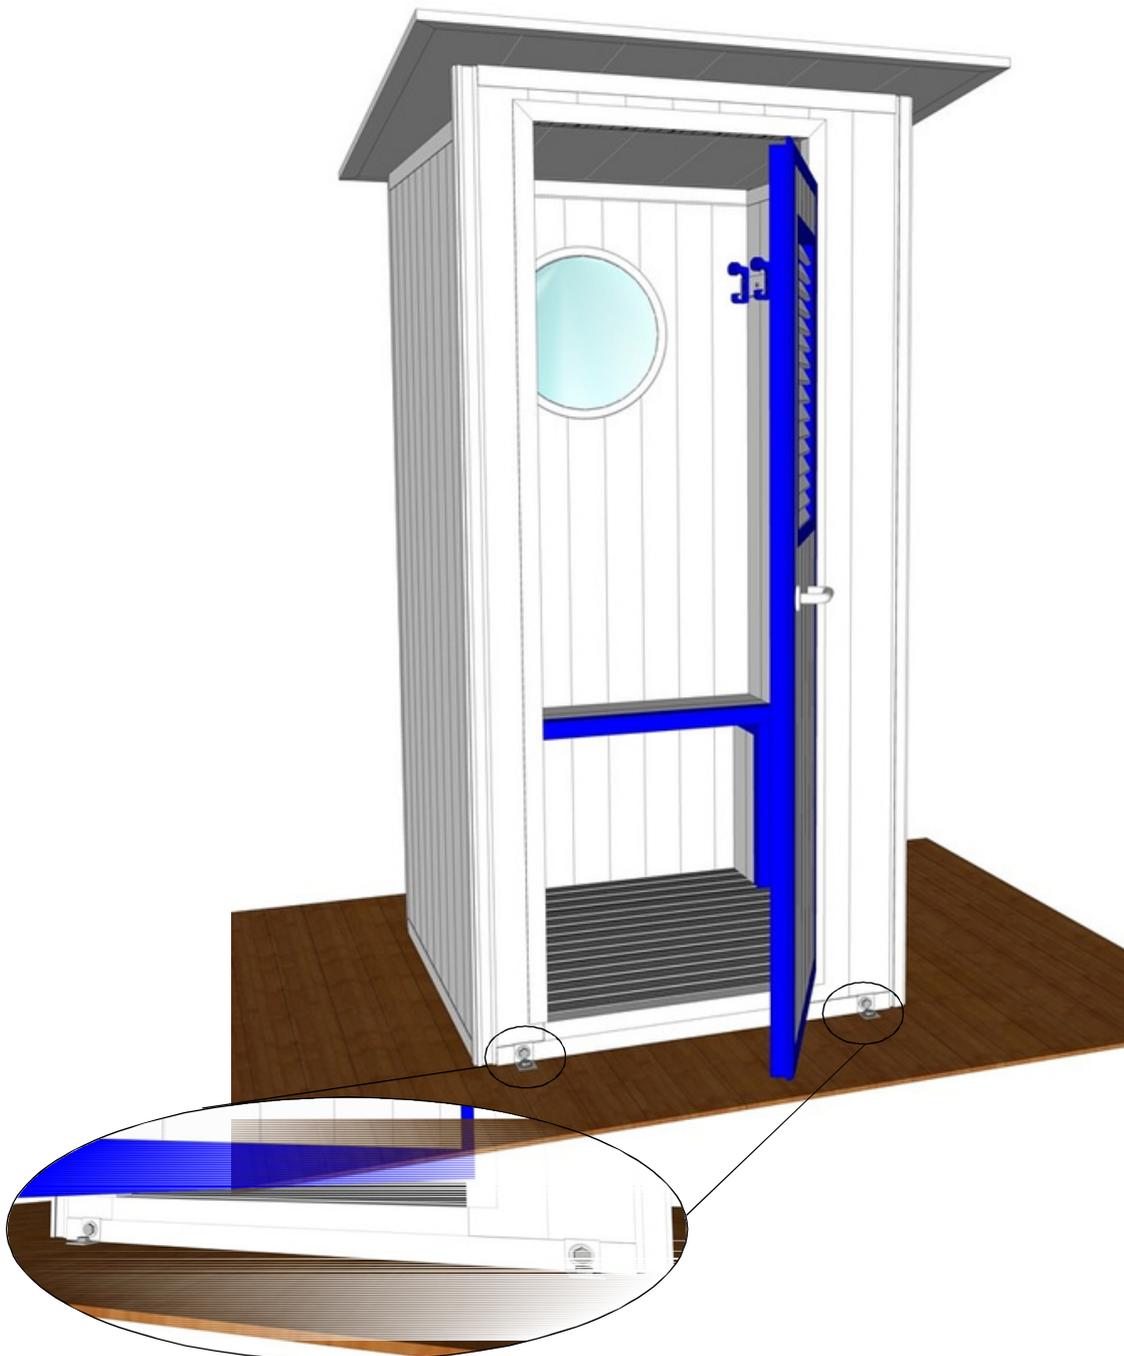

List of accessories provided for mounting:

N. 1 Mirror for cabin

N. 1 Coat hanger for cabin

N caution. 1 Cabin handle

N quell. 1 Pawl

N appears. 4 Ground fixing brackets for cabin

N. 4 Fischer 8

N I. 16 Bolts 6 x 16 for roof fixing complete with washers

N appropriate. 2 Bolts  $\sigma 6 \times 70$  or  $\sigma 6 \times 90$  for fixing hanger single cab or row cab complete with nuts and washers

N replace. 4 screws 4,8 x 45 for cabin for fixing the squads on the ground

N replace. 4 screws 5,5 x 25 for cabin for fixing the squads at the cabin